

Montageanleitung

Bilderleiste Altholz / Eiche 02

weld & co

HINWEIS:

Die Bilderleisten werden in massiven Wänden mit Dübeln und Schrauben befestigt. Diese sind im Lieferumfang enthalten. Bei der Montage an Leichtbauwänden müssen für das Wandmaterial geeignete Dübel verwendet werden – diese sind im Lieferumfang NICHT enthalten. Bei bestimmten Leichtbaumaterialien kann auf Dübel ganz verzichtet werden.

MONTAGE:

1. Mit Hilfe einer Wasserwaage eine ca. 40 cm (BLA02-S / BLE02-S) bzw. 80 cm lange Linie (BLA02-M / BLE02-M und BLA02-L / BLE02-L) an die Wand zeichnen, wo später die Bilderleiste hängen soll.
2. Bei massiven Wänden: Im Abstand von 30 cm (BLA02-S / BLE02-S) bzw. 70 cm (BLA02-M / BLE02-M und BLA02-L / BLE02-L) zwei ca. 4 cm tiefe 6 mm-Löcher in die Wand bohren.
Bei Leichtbauwänden: Ggf. im Abstand von 30 cm (BLA02-S / BLE02-S) bzw. 70 cm (BLA02-M / BLE02-M und BLA02-L / BLE02-L) je einen Dübel eindrehen.
3. Bei massiven Wänden: Dübel in die Löcher stecken und vorsichtig mit einem Hammer hineinschlagen.
4. Mit Hilfe eines Schraubendrehers in beide Dübel je eine Schraube einschrauben, bis sie ca. 1 cm aus der Wand guckt.
5. Die Bilderleiste mit den vorgesehenen Bohrungen auf die Schrauben stecken. Bei unebenen Wänden durch Hinein- oder Herausdrehen der Schrauben feinjustieren.

TIPP:

Montieren Sie die Bilderleiste mit Hilfe einer zweiten Person.

ACHTUNG:

Die volle Belastbarkeit kann nur bei stabiler und fachgerechter Montage gewährleistet werden!

TECHNISCHER SUPPORT:

post@weldco.de
+49 5731-4962902


BENÖTIGTES WERKZEUG:

Wasserwaage
Bleistift

Bohrmaschine
6 mm-Bohrer

(Achtung: Bohrer passend zum
Wandmaterial wählen!)

Hammer
Kreuzschraubendreher

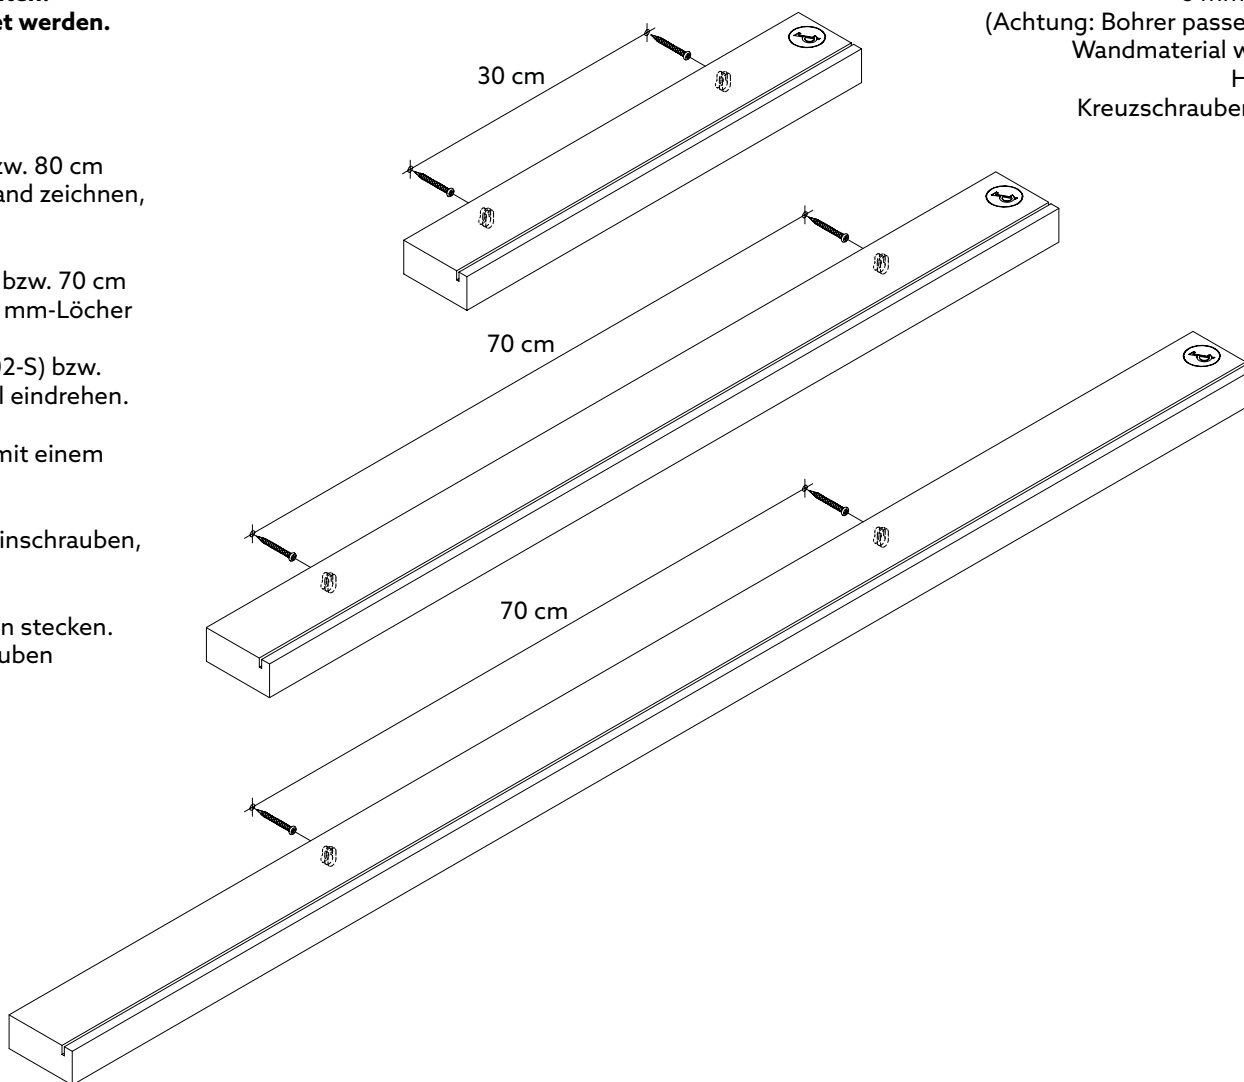

Mounting instructions

Reclaimed Wood / Oak 02 Picture Ledge

weld & co

PLEASE NOTE:

The picture ledges are intended for mounting on masonry walls using wall anchors and screws which are included in the delivery. When hanging the picture ledge on walls made of lightweight materials (drywall or similar), anchors which are suitable for the wall material must be used – these are NOT included. Some types of wallboard do not require the use of wall anchors.

MOUNTING:

1. Using a spirit level and a pencil, draw an approx. 40 cm (BLA02-S / BLE02-S) or 80 cm (BLA02-M / BLE02-M and BLA02-L / BLE02-L) line on the wall where you plan to hang the picture ledge.
2. For masonry walls: Using a 6-mm bit, drill two approx. 4-cm-deep holes into the wall, spaced 30 cm (BLA02-S / BLE02-S) or 70 cm (BLA02-M / BLE02-M and BLA02-L / BLE02-L) apart.
For drywall, etc.: If necessary, screw in two wall anchors spaced 30 cm (BLA02-S / BLE02-S) or 70 cm (BLA02-M / BLE02-M and BLA02-L / BLE02-L) apart.
3. For masonry walls: Insert wall anchors into the holes and carefully tap them into place using a hammer.
4. Place a screw into each anchor and tighten it with a screwdriver until about 1 cm is still visible.
5. Using the holes in the picture ledge, hang it onto the screws. If the wall is uneven, you may have to tighten or loosen the screws until the ledge fits snugly against the the wall on both sides.

OUR TIP:

Get a second person to help you hang the picture ledge.

PLEASE NOTE:

The full load-bearing capacity of the picture ledge can only be met if it is securely and correctly attached to the wall.

TECHNICAL SUPPORT:

post@weldco.de

YOU'LL NEED:

Spirit level
Pencil
Drill
6-mm drill bit
(please select an appropriate drill bit for your wall material)
Hammer
Phillips screwdriver

