

Montageanleitung Wandregal Altholz/Eiche

weld & co

MONTAGE:

1. Mit Hilfe einer Wasserwaage eine ca. 80 cm lange Linie an die Wand zeichnen, wo später das Regal montiert werden soll.
2. Die Mitte der Linie mit einem Bleistift markieren. Von der Mitte aus nach links und rechts jeweils 35 cm abmessen und markieren. Die beiden Markierungen kennzeichnen den **Abstand der Bohrlöcher von 70 cm**.
3. An den links und rechts entstandenen Markierungen jeweils ein 10 mm-Loch mit 8 cm Tiefe bohren.
4. Dübel in die Löcher stecken und vorsichtig mit einem Hammer hineinschlagen.
5. Je eine Unterlegscheibe auf die Tablarträger stecken.
6. Beide Tablarträger mit Hilfe eines Schraubenschlüssels in die Dübel schrauben, bis das Gewinde vollständig in der Wand verschwunden ist und die Unterlegscheibe fest an der Wand sitzt.
7. Regal auf die Tablarträger stecken.

TIPP:

Montieren Sie das Regal mit Hilfe einer zweiten Person.

ACHTUNG:


Die volle Belastbarkeit kann nur bei stabiler und fachgerechter Montage gewährleistet werden!

TECHNISCHER SUPPORT:

post@weldco.de
+49 5731-4962902

BENÖTIGTES WERKZEUG:

Wasserwaage
Bleistift
Bohrmaschine
10 mm-Bohrer
(Achtung: Bohrer passend zum
Wandmaterial wählen!)
Hammer
10 mm-Schraubenschlüssel

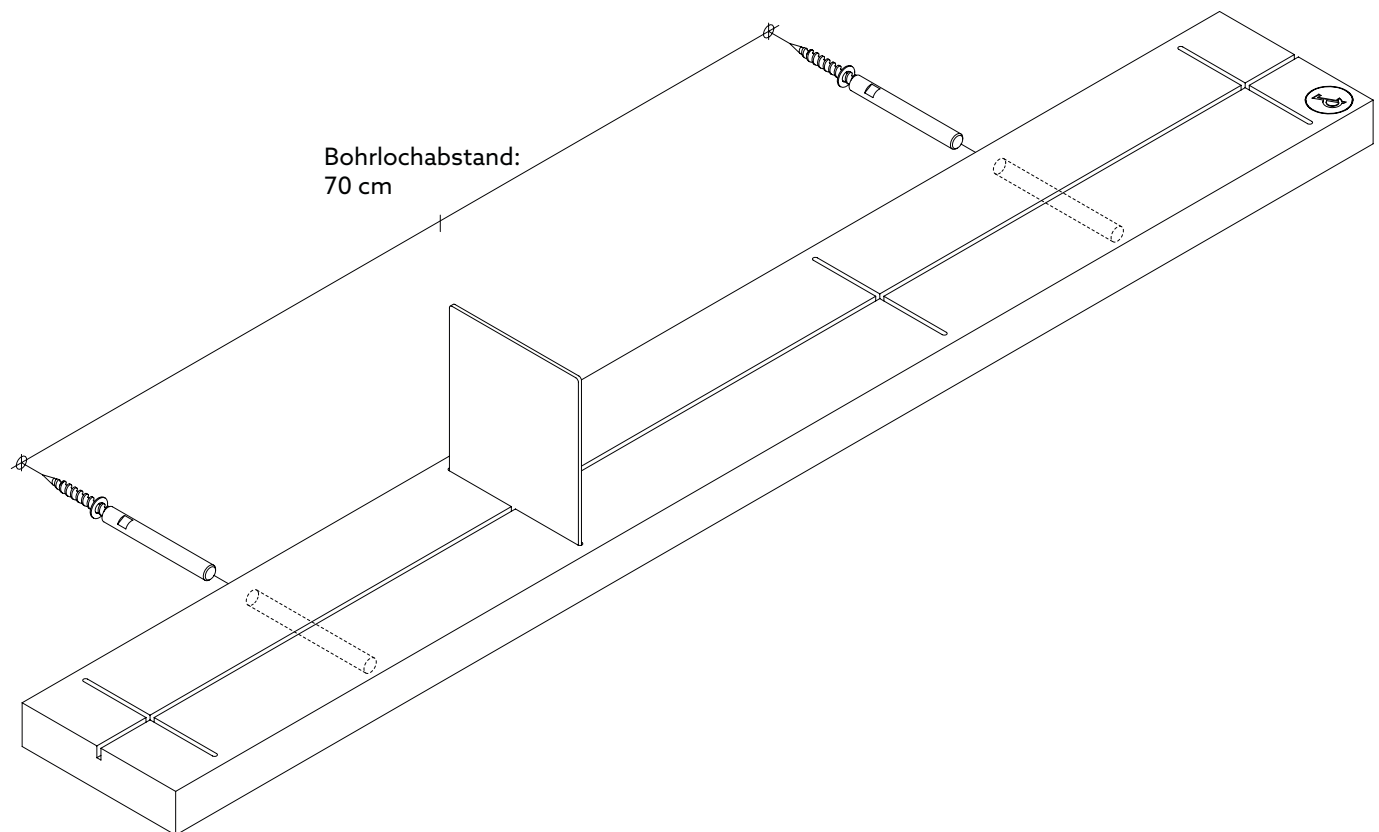

Mounting instructions for masonry walls

Reclaimed Wood / Oak Wall Shelf

weld & co

MOUNTING:

1. Using a spirit level and a pencil, draw an approx. 80 cm line on the wall where you plan to hang the shelf.
2. Mark the middle of the line with a pencil. From this point, measure 35 cm to the left and to the right, marking these spots. The two marks indicate the distance between the two holes, 70 cm.
3. Using a 10-mm bit, drill two approx. 8-cm-deep holes into the wall.
4. Insert wall anchors in the holes and carefully tap them into place using a hammer.
5. Place a washer on each shelf support.
6. Screw both shelf supports into the wall anchors using a 10 mm-wrench until the thread has completely disappeared into the wall and the washer is tight against the wall.
7. Place the shelf onto the shelf supports.

OUR TIP:

Get a second person to help you hang the shelf.

PLEASE NOTE:

The full load-bearing capacity of the shelf can only be met if it is securely and correctly attached to the wall.

TECHNICALSUPPORT:

post@weldco.de

YOU'LL NEED:

Spirit level
Pencil
Drill
10 mm-Drill bit
(please select an appropriate drill bit for your wall material)
10mm-Wrench

